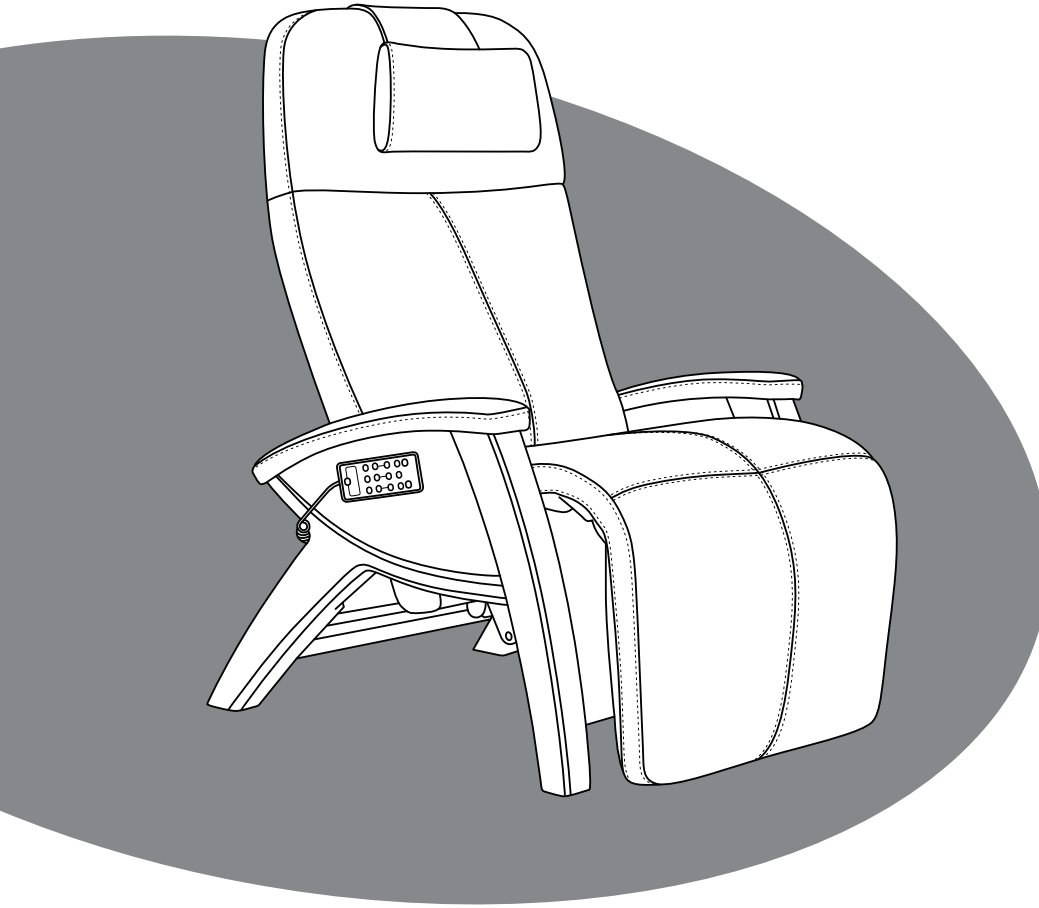


SVAGO™

SV-396

Assembly Instruction Manual

This chair arrives in one box.

Step A: Open the box and remove the base and backrest. Put the base at your desired location.





Step B: Installing the backrest.
Sit the backrest onto the base and zip the zipper between the backrest and base. Then, carefully lift the backrest vertically into the mounting brackets and engage the slotted holes. Press down on the backrest until you hear a click on each side.





Step C: Connect the two wire harnesses.

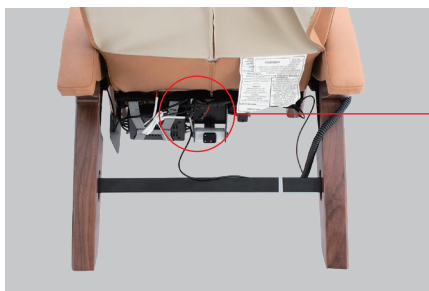

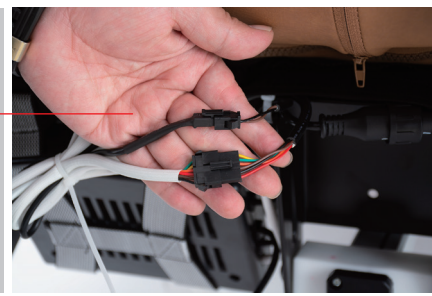

Step D: Connect the chair to the power supply with power adaptor.





Step E: Attach the pillow onto the top of backrest pad. Slide the strap through the loop and snap it in place.





Step F: Route the remote wire under the right rear leg and attach it to the magnetic right-side panel. Now your chair is ready to go!



